


STEEL STRAPPING SEALER

PARTS LIST		
Part No	Part Name	Qty./Tool
# 1	Sealer Handle Assembly	2
# 2	Jaws	8
# 3	Notchers	2
# 4	Notcher Pins	2
# 5	Screw & Nut	1
# 6	Jaw Pins	2
# 7	Toggle Pins	2
# 8	Side Plates	2
# 9	Guide Pin	1

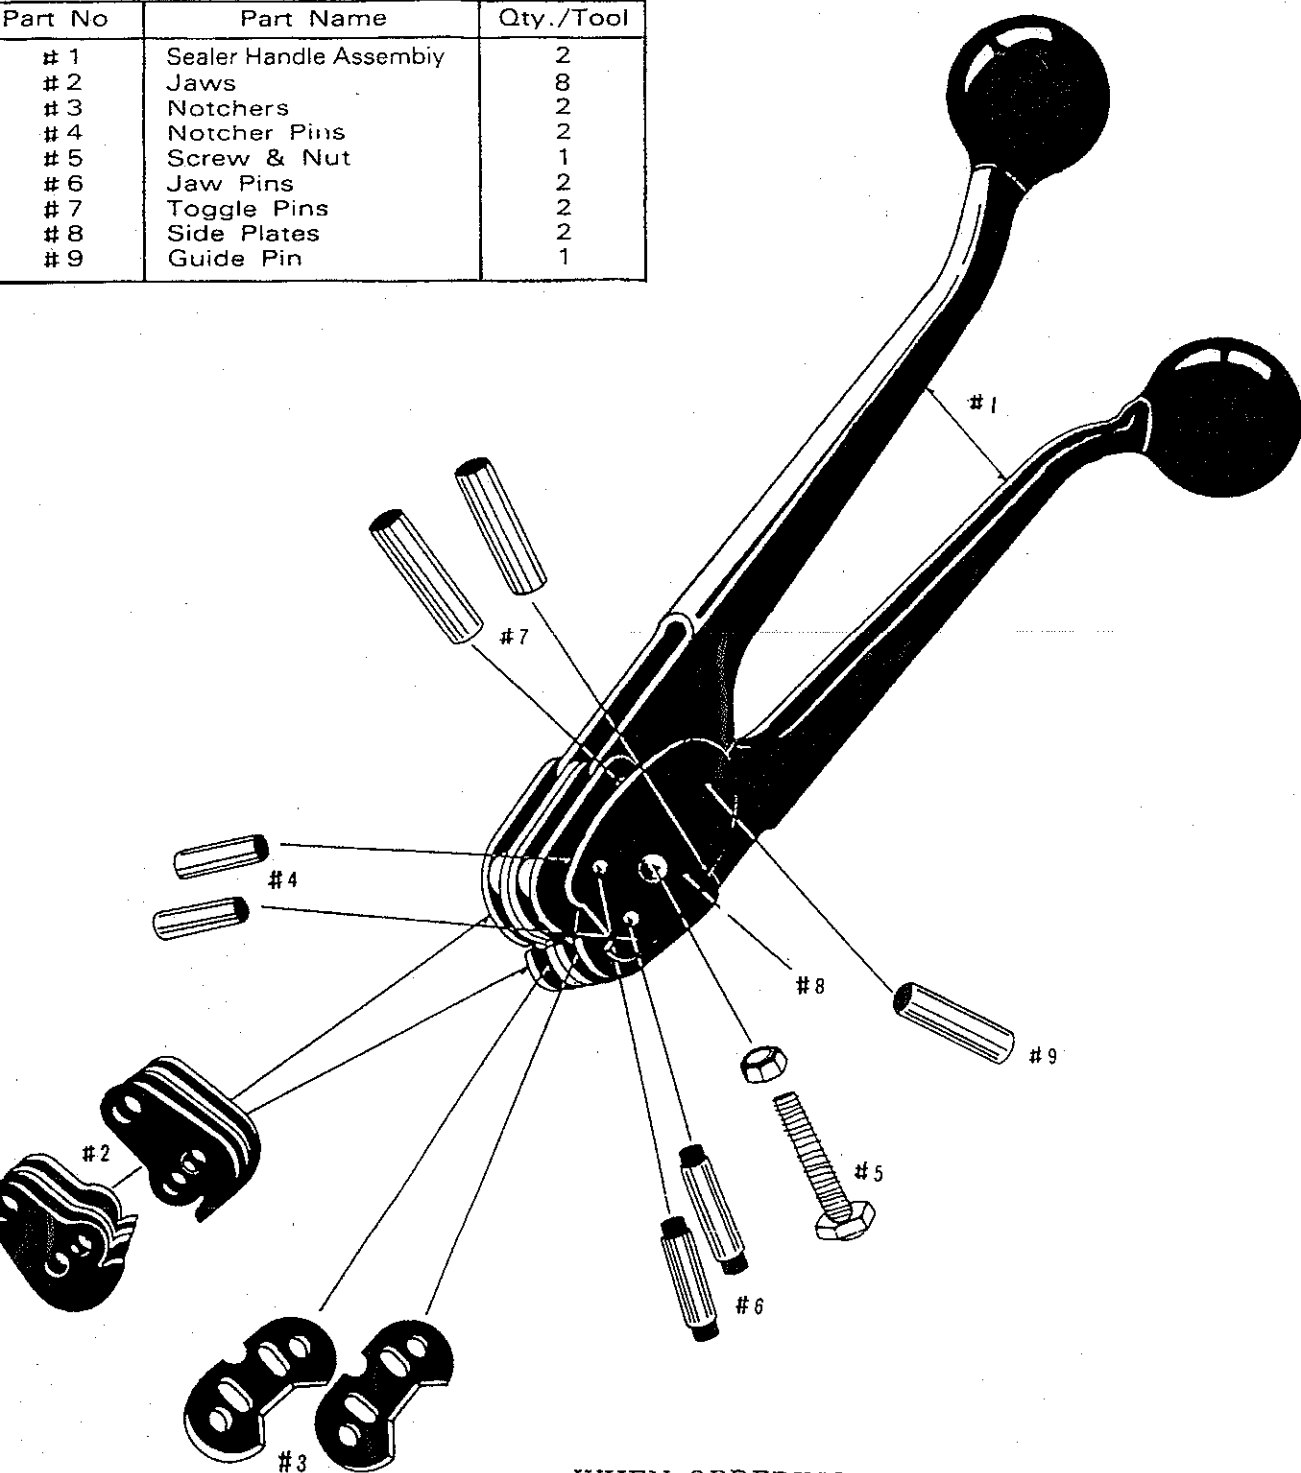

WHEN ORDERING parts, be sure to specify the size or model number of the sealer, in addition to the part number.